

TFB

Simple Solutions Removable Hardware

Owner's Manual - Maintenance Guide

True Forming Back - Simple Solutions FlipLock Hardware



Customer Satisfaction	. i
General	. i
Important Informationii-i	iii
Warranty	ii
Supplier Reference	ii
Warning Labels	iii
Limited Liability	iii
Testing	iii
Design and Function	1
Intended Use	1
Parts Breakdown	1
Installation Instructions2-	7
Preparations	2
Installation Plan	2
Required Tools	2
Mounting the Hardware to the Back Shell	3
Mounting the Hardware to the Back Posts	4
Mounting the J & L Hardware	5
Operating Instructions6-	8
Adjustments, Depth	6
Adjustments, Width	7
Adjustments, Angle	8
Removable Hardware Operation (2- and 4-point)	9
First Time Use 1	0
Dealer Assistance1	0
User Testing 1	0
Conditions of Use 1	0
Maintenance 1	1
Cleaning1	1
Disinfection 1	1
Maintenance1	1

Stealth Products is committed to 100% customer satisfaction. Your complete satisfaction is important to us. Please contact us with feedback or suggestions to help us improve the quality and usability of our products.

You may reach us at:



Stealth Products, LLC 104 John Kelly Drive Burnet, TX 78611

Phone: (512) 715-9995 Toll Free: (800) 965-9229 Fax: (512) 715-9954 Toll Free: (800) 806-1225

> info@stealthproducts.com www.stealthproducts.com

CE



MDSS GmbH Schiffgraben 41 30175 Hannover, Germany

General

Read and understand all instructions prior to the use of this product. Failure to adhere to instructions and warnings in this document may result in property damage, injury, or death. Product misuse or failure to follow instructions will void the warranty.

Immediately discontinue use if any function is compromised, if parts are missing or loose, or if any component shows signs of excessive wear. Consult with your supplier for repair, adjustment, or replacement.

All persons responsible for fitting, adjustment, and daily use of the devices discussed in these instructions must be familiar with and understand all instructions and warnings, and maintain our products according to our instructions on care and maintenance. The installation instructions will guide you through this products' options and possibilities.

Instructions are written with the expressed intent of use with standard configurations. They also contain important safety and maintenance information, as well as describe possible problems that can arise during use. For further assistance, or more advanced applications, please contact your supplier or **Stealth Products** at (512) 715-9995 or toll free at (800) 965-9229.

Always keep the operating instructions in a safe place so they may be referenced as necessary.

All information, pictures, illustrations, and specifications are based on the product information that was available at the time of printing. Pictures and illustrations shown in these instructions are representative examples and are not intended to be exact descriptions of the various parts of the product.

These products are designed to be fitted, applied, and installed exclusively by a healthcare professional trained for these purposes. The fitting, application, and installation by a non-qualified individual could result in serious injury.

Warranty

Our products are designed, manufactured, and produced to the highest of standards. If any defect in material and workmanship is found, **Stealth Products** will repair or replace the product at our discretion. Any implied warranty, including the implied warranties of merchantability and fitness for a particular purpose, shall not extend beyond the duration of this warranty. **Stealth Products** does not warrant damage due to, but not limited to: misuse, abuse, or misapplication of product, and/or modification of product without written approval from **Stealth Products**. LLC. Any alteration or lack of serial number, where applicable, will automatically void all warranty.

Stealth Products, LLC is liable for replacement parts only. **Stealth Products, LLC** is not liable for any incurred labor costs.

Stealth Products warrants against failure due to defective materials or workmanship:

Covers: 2 years

Hardware: 5 years

Electronics: 3 years

In the event of a product failure covered by our warranty, please follow the procedures outlined below:

Call Stealth Products at (512) 715-9995 or toll free at (800) 965-9229.

Request a Return Authorization (RA) form from the Returns Department and follow the documentation instructions.

You can download additional copies of this manual by accessing the **Stealth** website (*https://stlpro.site/stealth-docs*) and searching "P136D689" in the search bar at the top of the page.

Supplier Reference

Supplier:	
Telephone:	
Address:	
Purchase Date:	
Model:	

Warning Labels

Warnings are included for the safety of the user, client, operator, and property. Please read and understand what the signal words **DANGER**, **WARNING**, **CAUTION**, **NOTICE**, and **SAFETY** mean, and how they could affect the user, those around the user, and property.

A DANGER	Identifies an imminent situation which, if not avoided, may result in severe injury, death , and property damage .	
	Identifies a potential situation which, if not avoided, may result in severe injury , death , and property damage .	
	ldentifies a potential situation which, if not avoided, may result in minor to moderate injury and property damage .	
NOTICE	ldentifies important information not related to injury, but possible property damage .	
SAFETY	Indicates steps or instructions for safe practices, reminders of safe procedures, or important safety equipment that may be necessary.	

Limited Liability

Stealth Products, LLC accepts no liability for personal injury or damage to property that may arise from the failure of the user or other persons to follow the recommendations, warnings, and instructions in this manual.

Stealth Products does not hold responsibility for final integration of final assembly of product to end user. **Stealth Products** is not liable for user death or injury.

Testing

Initial setup and driving should be done in an open area free of obstacles until the user is fully capable of driving safely.

Design and Function

Intended Use

The **Simple Solutions Removable** hardware is intended to provide a versatile mounting solution for end users who require a removable mounting hardware for the True Forming Back (TFB) family. The hardware features isolated depth and angle adjustments that provide trouble-free adjustability.

Parts Breakdown

Item	ID	Part Number	Description	Qty.
A. Mounting Bracket	A1	BKT13 (45°) BKT14 (90°)	Bracket for Flip Lock Hardware	1
	A2	M6 x 1 x 12MM BHS	M6 x 1.0 x 12MM Button Head Screw	2
	A3	M6 SSW	0.5 OD x .266 ID x .250 Thick Washer, Black Oxide	2
A3 45° bracket shown.	A 4	TFB200-88	Single Hole T-Nut Metric	2
B. Mounting Pin	B1	BKT01	Removable, Angle Adjustable, Seat Back Bracket	1
B2 B5 B6	B2	PIN02	Latch Pin	1
	B3	NUT02	Threaded Pointer Slot Nut	1
	B4	SPC01	1" Slot Point Spacer	1
	B5	M5x0.8x16MM SHS	M5x0.8x16MM Socket Head Screw	2
B4 B6		M6x1x22MM BHS	M6x1.0x22MM Button Head Screw	2
(B3) (B1)	B7	M6 SSW	0.5 OD x .266 ID x .250 Thick Washer, Black Oxide	2
C. Back-Post Clamp	C1	RCV02 (with latch)	Receiver (with latch and pin stop)	1
	C2	CLP01	Inside Clamp	1
	C3	M5x0.8x16MM SHS	M5x0.8x16MM Socket Head Screws	1
	C4	BR5002	Outside Clamp	1
	C5	M6x1x25MM BHS	M6x1x25MM Button Head Screws	1
<u> </u>	C6	PIN01	Cam Pin	1

Altering the hardware in any way and/or improper installation will void the warranty.

NOTICE

Design and Function

ltem	ID	Part Number	Description	Qty.
A. J & L Hardware		SSS200-36	1" Hold Down Drop Stop Weldment	1
	D2	SSS200-152	1 IN 7 Hole J-Hook	1
	D3	SSS200-153	Double Slot Adjustable L-Bracket	1
	D4	67582247	5/16 4 10 Internal Tooth H-Lock Washer	1
	D5	TFB200-88	Single Hole T-Nut Metric	2
	D6	M6x1x14.3MM RBW	M6x1mm Thread, 14.3mm Barrel Height Round Base - Base Weld Nut.	1
	D7	M6x1x35MM BHS	M6 x 1 x 35MM Button Head Screw	1
	D8	M6x1x16MM BHS	M6 x 1 x 16MM Button Head Screw	4
	D9	M6 SSW	0.5 OD x .266 ID x .250 Thick Washer, Black Oxide	2
	D10	M6x1.0 NLN	M6 - 1.0 Nylon Lock Nuts, Low Profile, 18-8 S/S, BI	2
6	D11	BR2020	2IN x 1IN OD x .875IN ID Reducer	2

Preparations

Only a qualified service technician may install the **Simple Solutions Removable** hardware.

WARNING An inco

An incorrect installation of the **Simple Solutions Removable** hardware and its accessories can cause damage to the hardware and/or injury to the user.

Installation Plan

Set up an installation plan before beginning the installation. This plan should take into account:

- Where the **Simple Solutions Removable** hardware will be placed and how it will be adjusted.
- Sufficient clearance for other hardware, such as wings or laterals that may be required.

Required Tools

Use the proper tools to install and adjust the **Simple Solutions Removable** hardware to the desired position for the user.

The tools needed to install the **Simple Solutions Removable** hardware are as follows:




Hardware	Description
4mm Hex Key	Flat and Button Head Screws
10mm Combo Wrench	4-point installation, Nylon Lock Nuts




The use of improper tools may cause damage to the device. Any connection must always be secured with all delivered screws. Use only the screws included in the package.

Mounting the Hardware to the Back Shell

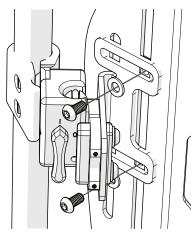


Step Two: Insert the screws and the mounting bracket into one of the mounting slots on the back shell.

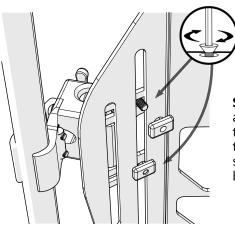

Step One: Place M6x1x12mm Button Head Screws (A2) and M6 Washers (A3) in the top and bottom slot of the Mounting Bracket* (A1).

* 45° bracket shown. 90° bracket may be used, if needed, and will follow the same instructions.

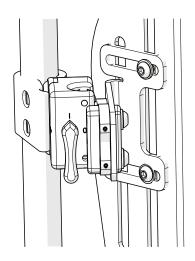


Step Three: Thread each screw into a Single Hole T-Nut (A4). Make sure the grooves in the T-nut line up with the edges of the slot. Tighten the screw to secure the mounting bracket in place.

Step Four: The J & L mounting brackets follow the same procedure to install on the lower portion of the back shell in 4-point installations. Align the mounting brackets with the slots in the back shell and lightly snug the M6x1x16mm Button Head Screws to hold the mounting brackets in position.

SAFETY

Periodically check all mounting hardware, ensuring each fastener is properly tightened.

Mounting the Hardware to the Back Posts

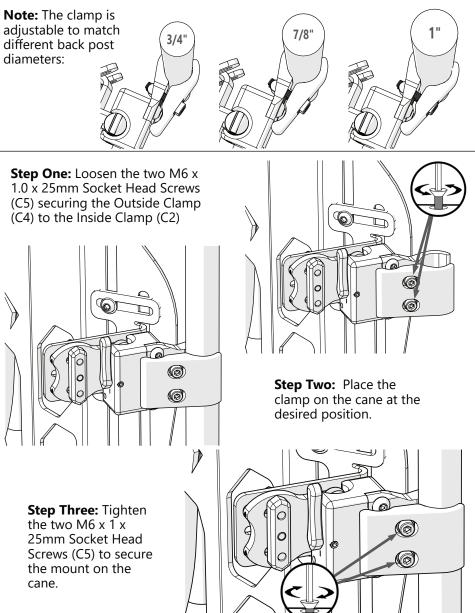


Maximum Weight Capacity: 250 lbs. (113.40 kg)


WARNING

Mounting the J & L Hardware

4-point installations require the J & L hardware in the lower position. Depending on the back shell installed, you will use a 45° or 90° bracket* to mount this hardware to the back shell. 7/8" canes will require the BR2020 spacer (**A**) to fit the J&L hardware. (J&L hardware not included with 2-point installation.)


Step One: For 1" canes, the Hold Down Drop Stop Weldment (**B**) can be placed directly on the cane. For 7/8" canes , place the BR2020 Reducer (**A**) on the cane and then the Weldment (**B**). Position it in the proper vertical position on the cane and secure with the M6 x 1 x 35mm Button Head Screw (**C**), 5/16" 4 10 Internal Tooth H-Lock Washer (**D**) and M6 x 1 x 14.3mm Round Base -Weld Nut (**E**).

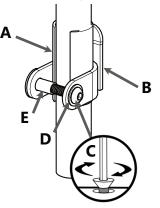

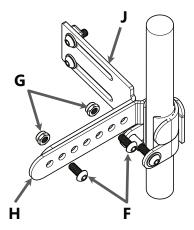

Step Two: To adjust the mounting hardware for depth, remove the two M6 x 1 x 16mm Button Head Screws (**F**) and M6 x 1 Nylon Lock Nuts (**G**) holding the 1 IN 7 Hole J-Hook (**H**) from the Double Slot Adjustable L-Bracket (**J**). Adjust the bracket to the desired holes and reinstall the screws to secure it in place.

Step Three: The 1 IN 7 Hole J-Hook (**H**) can be separated from the Hold Down Drop Stop Weldment (**A**) by pulling up gently and can be returned to the same position by placing it in the slot between the back of the weldment and the cane. If the fixed or removable hardware is adjusted for height, the weldment can be loosened and matched to the rest of the 4-point hardware using #1 - #5 as shown in the image to the right.

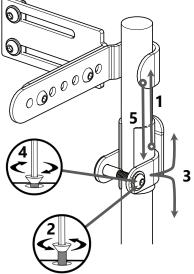


Adjustments

Depth Adjustment


The **Simple Solutions Removable** hardware can be adjusted to increase or decrease seat depth.

Step One: Loosen the M6x1x22mm Button Head Screws (B6) attaching the Mounting Pin (B) to the Mounting Bracket (A).

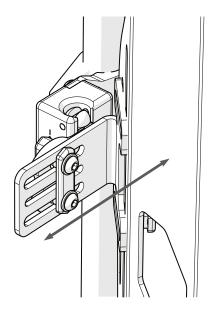


Step Three:


Tighten the two M6x1x22mm Button Head Screws (B6) to secure the back shell in the new position.

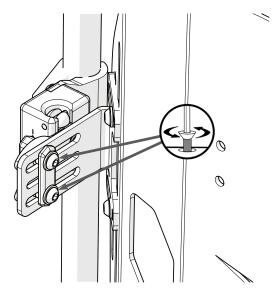

Step Two: Slide the Mounting Bracket (A) forward or backward into the desired position.

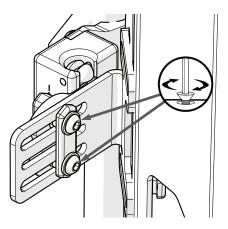


Width Adjustment

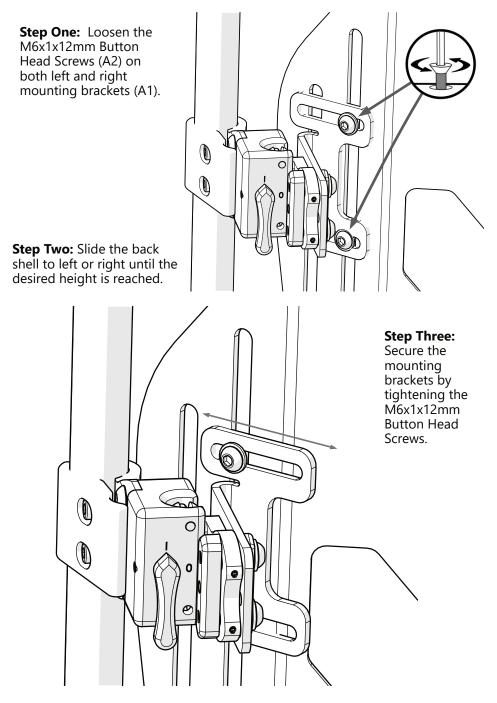


Angle Adjustment


Simple Solutions Removable hardware allows the back shell to pivot up or down.

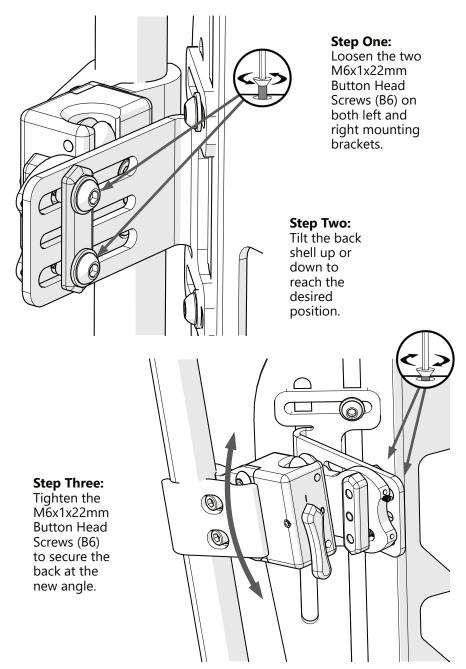

Removable hardware operation (2 pt. and 4 pt. Removable)

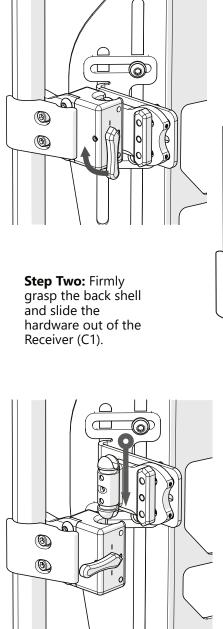

Step One: Rotate the Cam Pins (C6) a quarter turn on each removable hardware to unlock the mounting hardware from the Receiver (C1).

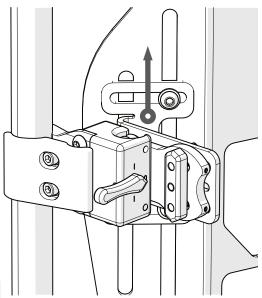

Step Three: To replace the back shell, slide the Latch Pin (B2) into the Back Post Clamps (C). Rotate the Cam Pin (C6) back to the vertical position to lock the back in place

Step Four: Lift gently on the back shell to ensure the **Simple Solutions Removable** hardware has engaged and is locked in. If either latch is not fully engaged, repeat the steps above.

Dealer Assistance

During first-time use by the client, it is advised that the dealer or service technician assists and explains the set-up to the customer (the user and/or the attendant). If needed, the dealer may make final adjustments.

User Testing

It is important that the customer is fully aware of the installation, how to use it, and what can be adjusted in order to gain as much mobility as possible. As a dealer, proceed as follows:

• Explain and show the customer how you have executed the installation, and explain the function.

Have the user test the position of the Simple Solutions Removable hardware.

Is the hardware in the proper position for the client?

- Can the user safely operate all controls with minimal effort?
- If needed, make any adjustments to the positioning.

Explain to the customer possible problems and how to address them.

Conditions of Use

The **Simple Solutions Removable** hardware is intended for use as installed by the dealer, in accordance with the installation instructions in this manual.

- The foreseen conditions of use are communicated by the dealer or service technician to the user and/or attendant during the first-time use.
- If the usage conditions change significantly, please contact your dealer or a qualified service technician to avoid excessive wear and tear or unintended damage.

Cleaning



Exercise caution when removing the back to avoid punctures, tears, or other damage to the fabric or foam. Be careful not to catch hair, wires, or other items when zipping and unzipping the covers.

- Use a soft cloth to clean the hardware.
- Ensure all cleaners are approved for finished steel, aluminum, plastic, and upholstered surfaces.
- A brush with soap and water can be used to remove any dirt and debris.

Disinfection

- Wipe gently with a cloth dampened with a household disinfectant.
- Allow foam to air dry thoroughly.

Maintenance

These care and guideline instructions will keep the hardware and covers in good condition for a longer period of time and prevent damage.

- Check and tighten all fasteners on a regular basis. Do not overtighten the fasteners.
- Repair or replace parts as needed.
- Gently remove dust and dirt from hardware with a damp cloth as necessary.

Notes
Notes

· · · · · · · · · · · · · · · · · · ·	



© 2021, Stealth Products, LLC



Stealth Products, LLC · info@stealthproducts.com · www.stealthproducts.com (800) 965-9229 | (512) 715-9995 | 104 John Kelly Drive, Burnet, TX 78611 P136D689 Nov 2, 2021